

CLOUD USER MANUAL



MIST

Table of Contents

1. PRECAUTIONS	1
2. PARTS AND BUTTONS OF THE DEVICE	2
3. INSERTING/REMOVING SIM CARDS	4
4. CHARGING	5
5. HOME SCREEN	5
6. BASIC OPERATION	6
1.Power On/Off	
2.Answer/End Call	
3.Call Phone	
4.WiFi	
5.Bluetooth	
6.View Notification	
7.Inputting Text	
7. APPLICATION	8
1.Contact	
2.Messaging	
3.Email	
4.Voicemail	
5.Camera	
6.Multimedia	
7.Browser	
8.Tools	
8. PERSONALIZE YOUR PHONE	17
1.Display	
2.Sounds	
3.Language	
4.Date&Time	
9. CARING FOR YOUR PHONE	19
10. FCC RF EXPOSURE INFORMATION	20

1. PRECAUTIONS

1)、 On the Road

Using a device while driving is illegal in many countries. Please refrain from using your mobile while driving.

2)、 Near Sensitive Electronics or Medical Equipment

Don't use your device near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

3)、 While Flying

Your device can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline personnel ask you to switch off your device, or disable its wireless functions, please do as they say.

4)、 At a Gas Station

Don't use your device at gas stations. In fact, it's always best to switch off whenever you're near fuels, chemicals or explosives.

5)、 Making Repairs

Never take your device apart. Please leave that to the professionals. Unauthorized repairs could break the terms of your warranty. Don't use your device if the antenna is damaged, as it could cause injury.

6)、 Around Children

Keep your mobile out of children's reach. It should never be used as a toy as this is hazardous.

7)、Near Explosives

Turn off your device in or near areas where explosive materials are used. Always obey local laws and turn off your device when requested.

 
8)、Emergency Calls

To make an emergency call your device must be turned on and in an area where there's network coverage. Dial the national emergency number and press "Send". Explain exactly where you are and don't hang up until help has arrived.

9)、Working Temperature

The working temperature for the device is between 0 and 40 degree Celsius. Please don't use the device outside the range. Using the device under too high or too low temperature might cause problems. At very high volume, prolonged listening to a mobile device can damage your hearing.


2. PARTS AND BUTTONS OF THE DEVICE

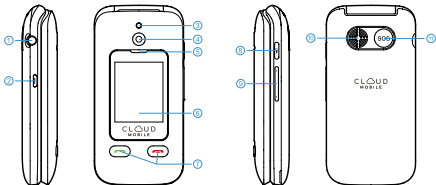





 
- ① Earphone Jack
- ② USB Connector
- ③ Flash/Flashlight
- ④ Camera

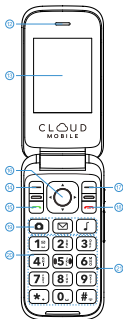








- ⑤ Sub-Handset
- ⑥ Sub-Display
- ⑦ Sub-Call/End Key
- ⑧ Flashlight Key

- ⑨ Volume Keys
- ⑩ Loudspeaker
- ⑪ SOS Key




- 12 Main-Receiver
- 13 Main-Display
- 14 Left Selection Key
- 15 Call Key
- 16 Direction And OK Keys
- 17 Right Selection Key
- 18 Power/End Key
- 19 Shortcut Key
- 20 Alphanumeric Keypad
- 21 Microphone

 Left Selection Key	Press: Access Menu (from Home screen) Confirm an option
 Call Key	Pick up/make a call Access Contacts(from Home screen)
 Right Selection Key	Press: Access Contacts(from Home screen) Go back to the previous view
 Power/End Key	Press: End a call, return to the Home screen Press and hold: Power ON/OFF
 Direction Key	Menu selection moves up, down, right, and left <ul style="list-style-type: none"> • Press up: Access Notifications • Press down: Access Browser • Press right: Access Multimedia • Press left: Access Applications

 OK Key	Confirm an option Press: Access Menu (from Home screen)
 Flashlight Key	Press: Turn on the Sub-Display Press and hold: Turn ON/OFF the flashlight
 Volume Keys	In call mode, adjusts the earpiece or headset volume In Music/Video/Streaming mode, adjusts the media volume In general mode, adjusts the ringtone volume
 SOS Key	Press: Access SOS help
 Sub-Call Key	Pick up a call
 Sub-End Key	End a call Press when charging: View charging status
 Shortcut Key	Press: Quickly open the corresponding application/interface
 '1' Key	Press and hold: Access Voicemail (from Home screen)
 '#' Key	Press and hold: Silence your phone

3. INSERTING/REMOVING SIM CARDS

 Installing the Nano-SIM Card and Battery Switch off your phone before installing or replacing the battery or the Nano-SIM card. Insert your fingernail into the slot at the bottom left of the back cover, and slide fingernail across bottom of back cover to lift it off.



WARNING!

To avoid damage to the phone, do not use any other kind of SIM card, or any non-standard Nano-SIM card cut from a SIM card.

 
You can get a standard Nano-SIM card from your service provider.

Insert the battery by aligning the metal contacts on the battery with the metal contacts in the battery compartment. Gently push down on the battery until it clicks into place.

Align the back cover with the back of the phone and press the cover back into place. Ensure that all the tabs are secure and there are no gaps around the cover.

4. CHARGING

Insert the small end of the charging cable into the charge port, and connect the charger to a power outlet.



Please use the official charger to charge the phone.


5. HOME SCREEN



Status bar

Status/Notification indicators

From the status bar, you can view both phone status (to the right side) and notification information (to the left side).



- You can press the **Up Direction Key**  to view detailed notifications

6. BASIC OPERATION

1). Power On/Off

Long press the **End/Power Key**  until the phone powers on/off.

2). Answer/End Call

 
Press the **Call Key**  or **Sub-Call Key**  to answer the call.

Press the **End Key**  or **Sub-End Key**  to end the call.

3). Call Phone

In the home screen, directly press the alphanumeric keyboard to enter the number to be dialed.

You can also select pre-stored contacts in the “Contacts” app.

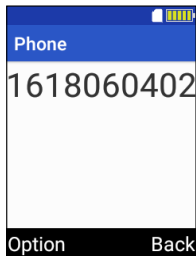

4). Wi-Fi

- Go to **Settings > Network & Internet > Wi-Fi**.

Select “ON” or “OFF” the Wi-Fi.

Search for the network you would like to connection with and press


OK Key .

You can also choose to “add network” to add network.

5). Bluetooth

 
- Go to **Settings > Connected devices > Bluetooth.**

Select "ON" or "OFF" the Bluetooth.

Search for the device you would like to pair with and press **OK** Key  .

6). View Notification


 
Press the **Up Direction Key**  from the Home screen to view notification.

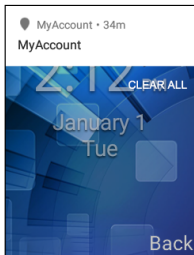








7). Inputting Text




You may press the **'#' Key**  to switch the input mode.

- abc (lower case), Abc (sentence case), or ABC (lock case): with this mode you must press each key multiple times to create each letter.

For example, an 'S' is created by pressing the **'7' Key**  four times. An 'e' is created by pressing **'3' Key**  twice, and so on.



- R9: predictive text mode is a feature that allows you to type faster, as the phone tries to predict what you are writing.

For example, To type “Hello”: press the ‘4’ Key  once, press the ‘3’ Key  once, press the ‘5’ Key  once, press the ‘5’ Key  once, press the ‘6’ Key  once, As you type, word suggestions will appear at the bottom of the screen. If you see the word you are trying to type, select it with the **Direction Key**  and press the **OK Key**  .




- 123: this mode generates only numbers. You may type ‘1’ by pressing the ‘1’ key just once, ‘2’ by pressing ‘2’ and so on. Switch back to ABC, Abc, abc or Kt9 mode to continue writing words.
- Symbols: This function provides punctuation and special characters. Symbols may be accessed by pressing the key as well. Find the right symbol by pressing **Left/Right Direction Key**  . When the cursor highlights a symbol you want to add, press the **OK Key**  to select it.
- If you want to delete the already typed letters or symbols, press the **Right Selection Key**  to delete them one by one or long press to delete all at once.

 
 
7.APPLICATION

1). Contact




Contacts enables quick and easy access to the contact you want to reach. You can access this function by press the **Right Selection Key**  from the Home screen, or press the **OK Key**  and select Contacts.


• Adding a Contact

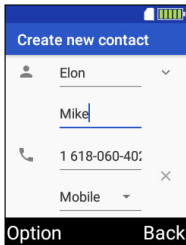
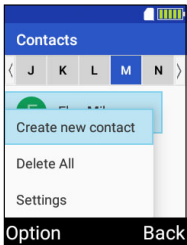
In contacts screen, press the **Left Selection Key**  to access option, select “Create new contact”, and press the **OK Key**  to add. When finished, press the **Left Selection Key**  to access options, select “save”.






• Editing a Contact

  In contacts screen, press the **Direction Key**  to select the contact, press the **Left Selection Key**  to access options, select "Edit", and press the **OK Key**  to edit.

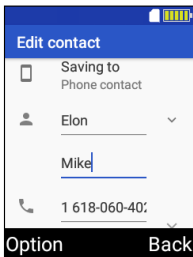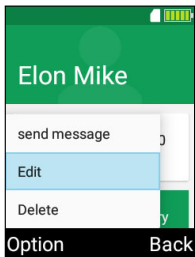When finished, press the **Left Selection Key**  to access options, select "save".





• Deleting a Contact




In contacts screen, press the **Direction Key**  to select the contact, press the **Left Selection Key**  to access options, select "Delete" to delete contact, and press the **OK Key**  to delete.

 
 
2). Messaging

Use the messaging feature to send and receive text and multimedia messages.

From the Home screen, press the **OK Key**  and select "Messages". You can also press the **Messaging Shortcut Key**  from the Home screen to quickly open the "Messaging".

Create a new message


- In Messaging screen, press the **Left Selection Key**  to access options, select "New message" to enter messages.
- Enter the phone number of the recipient in the to bar or press the **Left Selection Key**  to access options, select "Add Contact" to add contact.
- Press the **Down Direction Key**  to go to the SMS bar to enter the text of the message.

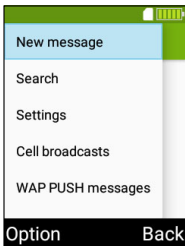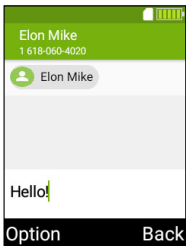


- Press the **Left Selection Key**  to access options, select "Send" to send text messages.

3). Email

You can add your mailbox for sending/receiving email.


To access this function, press the **OK Key**  from the Home screen and select "Applications > Email"

You can also press the **Right Direction Key**  from the Home screen to quickly open the "Applications" and select "Email".

4). Voicemail

You can add your Voicemail number for use Voicemail.


You need to contact the telecom operator to activate this service.


To access this function, press and hold the '**1**' Key  on the home screen to open the voicemail.


5). Camera

Your mobile phone features a Camera to take photos and shoot videos.

•Turn on the Camera

To access this function, press the **OK Key**  from the Home screen and select "Camera".

You can also press the **Camera Shortcut Key**  from the Home screen to quickly open the Camera.

 
Point the camera at the scene to be captured, and press the **OK Key**  to take the photo. Photos will be automatically saved to "Multimedia" app.

•Zoom in/out

Press **Right/Left Direction Key**  to zoom lens in and out.

•Adjust exposure

Press **Up/Down Direction Key**  to Adjust exposure.

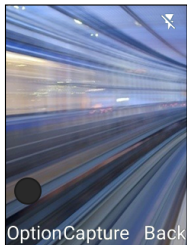


•More Options


Press the **Left Selection Key**  to access:

- Modes switcher: Select to switch between Photo and Video mode.
- Previews: Preview picture.
- Scene mode: Switch between different camera effects.
- Self timer: Sets the time a photo is taken after pressing the OK Key.
- Picture size: Set the size of the photo shoot.
- ZSD: Turn ZSD "ON" or "OFF".
- White balance: Set white balance.
- FLASH: Turn the flash "ON" or "OFF".
- ISO: Adjust camera ISO.
- Anti flicker: Adjust Anti flicker.


6). Multimedia


The "Multimedia" app provides you with one recreational location to view pictures, Videos or listen to music, FM radio.

To access this function, press the **OK Key**  from the Home screen and select "Multimedia".

You can also press the **Left Direction Key**  from the Home screen to quickly open the "Multimedia".

5.1 Pictures

In the picture list, select an image and press **OK Key**  to open the picture.

When viewing pictures in Pictures, Press the **Right Direction Key** , select the “share” icon, Can share pictures.

Press the **Up/Down Direction Key**  to view the previous/next picture.

 
•More Options

press the **Left Selection Key**  to access options below:


- Delete: Delete the selected photo.
- Set wallpaper: Set picture as wallpaper.
- Rotate left/Rotate right: Rotate the picture to the left/right.
- Details: View picture details.


5.2 Videos


Video acts as a media player for you to view videos.

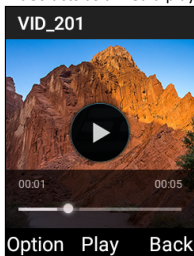


In the play screen

Press the **OK Key**  to pause/play video.

Press the **Left/Right Direction Key**  to adjust the playback progress.

When viewing Video in “Videos”, select an video and press the **Left Selection Key**  to access options below:

 
- Share: Can share videos.
- Landscape/Portrait: Rotate the viewing direction.
- Loop: Loop video.

If you want to delete the video, you can select the video in the list and press the **Left Selection Key**  to access option, select “Delete”.

5.3 Music


You can play music files stored on phone storage in your phone. Music files can be downloaded from your computer to phone using a USB cable or storage card.

In addition to being able to open music in “Multimedia” applications.

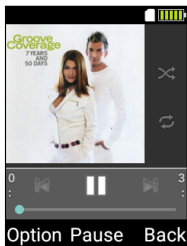

In the play screen

Press the **OK Key**  to pause/play song.

Press the **Left/Right Direction Key**  to Switch Songs.

Press the **Left Selection Key**  to access option.

- Delete: Delete the selected song.
- Shuffle On: Shuffle songs.

- Repeat All: Repeat all songs.
- Repeat Current: Repeat current song.

5.4 FM Radio


Your phone is equipped FM radio functionality. You can use the application listen to the radio.

To use it, you must plug in your headset, which works as an antenna connected with your phone.



In the play screen

Press the **OK Key**  to play or pause.

Press the **Left/Right Direction Key**  to search and go to the nearest frequency channel.

Press the **Left Selection Key**  to access option.


- Radio Stations
- Speaker
- Start recording
- Saved recordings


(1) The quality of the radio depends on the coverage of the radio station in that particular area.

 
(2) Depending on your network operator and market.

7). Browser

Using Browser, you can enjoy surfing the Web.

To access this function, press the **OK Key**  from the Home screen and select “Browser”.

You can also press the **Down Direction Key**  from the Home screen to quickly open the Browser.

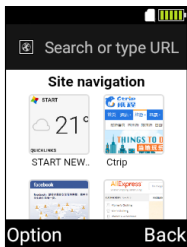

8). Tools

The tools provides many useful functions.

include :

- Calculator
- Alarm
- Calendar
- Timer
- Stopwatch
- World clock

8. PERSONALIZE YOUR PHONE

1). Display


1.1 To adjust brightness level

- Go to **Settings > Display > Brightness level.**

Select desired brightness by pressing **Left/Right Direction Key** .

1.2 Change the main menu style

- Go to **Setting > Display > Main menu style.**

Press **OK Key**  then press Select main menu style by pressing

Up/Down Direction Key , press **OK Key**  confirm.

1.3 To adjust wallpaper

- Go to **Settings > Display > Wallpaper.**


Press the **Left/Right Direction Key**  to select from pre-loaded Wallpapers.

Press “My photos” to select from Images that are stored on your device.

1.4 To adjust Screen timeout


- Go to **Settings > Display > Sleep.**

Select when you would like your screen to turn off by pressing

 
Up/Down Direction Key .

1.5 To adjust Display size


- Go to **Settings > Display > Display size.**

Adjust display size by pressing **Left/Right Direction Key** .

2). Sounds

You can find the sounds settings in “settings”, or press the **Sounds Settings Shortcut Key**  to quickly open the sound settings screen.

2.1 To adjust volume


- Press the **Volume Key**  that is located on the right side of the

device to adjust the Ringtone & Notification volume.

You can also go to sound settings to adjust the volume for Media, Alarm and Ring .


2.2 To adjust phone ringtone

Go to **Settings > Sound > Phone ringtone**.

- Press the **UP/Down Direction Key** . ringtone to select from pre-loaded Ringtone.

2.3 To adjust Default notification sound

Go to **Settings > Sound > Advanced > Default notification sound**.

- Press the **UP/Down Direction Key** . ringtone to select from pre-loaded notification sound.

2.4 To adjust Default alarm sound

Go to **Settings > Sound > Advanced > Default alarm sound**.

- Press the **UP/Down Direction Key** . ringtone to select from pre-loaded alarm sound.

2.5 Set other sounds

Go to **Settings > Sound > Advanced**.

- Dial pad tones
- Dial number voice
- Incoming call
- Charging sounds

3). Language

To change the language

Go to **Settings > System > Languages & input > Languages**.

Press the desired language preference.

For more languages, click “Add Language”.

4). Date & Time

To change the Date & Time

- Go to **Settings > System > Date & Time.**
- Press on the Time option to adjust the time and minutes.

9. CARING FOR YOUR PHONE

Your phone is a complex electronic device; think of it as a mini-computer. Here are a few tips to help you extend the life of your new phone.

- **Do not get your phone wet.** Even a small amount of moisture can damage your phone and accessories.
- **Protect your phone's screen.** Your phone's screen is delicate.
- **Use the original manufacturer's batteries and accessories.** Non-approved batteries and accessories can harm you and damage your phone.
- **Do not use damaged accessories.** If your charger or any other accessory is damaged, please replace it. Do not attempt to charge your phone if the charger has been dropped, received a sharp blow, or has been otherwise damaged; doing so may damage your phone.

10. FCC RF EXPOSURE INFORMATION

WARNING! ! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RE) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back/front of the phone kept 1cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1cm must be maintained between the user's body and the back/front of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1cm separation distance between the use's body and the back/front of the phone, and have not been tested for typical body-worn operations may not comply with FCC RE exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) /
<ICNIRP> (1999)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards) .

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

RF Exposure Information:

This product is compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID:2AY6A-MIST

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not use the device with the environment which below minimum -10°C or over maximum 40°C , the device may not work. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.